

Coordinates are in NAD83 UTM Zone 11

To compute grid distances, multiply ground distances shown by the combined scale factor 0.999898

