

1. Pada Folder Installer TBQ ada 2 Folder yaitu Client dan Server--> install kedua installer pada folder tersebut

 Client	File folder
 Server	File folder

2. Pada menu Start Windows--> All Apps --> Cubicost--> Cubixoct TBQ Server--> Klik

3. isi Email yang teregistrasi dan password yang sudah di modifikasi (yang belum modifikasi akan ada notifikasi di spam dari Glodon dan klik isi notifikasi tersebut dan di dalamnya ada link untuk Verify Account / Modify Password, klik link tersebut dan ikuti step by stepnya). Apabila tidak menerima email, klik link ini utk modify password <https://account.global.glodon.com/forgetInit>



1 2 3 4

Welcome to Server Settings Wizard!

Step 1: Bind with your company account.

[Forgot company account/password?](#)

4. pilih email yang ada dan klik next

Step 2: Set a company administrator.

	User name	Account
<input type="radio"/>	[REDACTED]	[REDACTED]
<input checked="" type="radio"/>	T...	[REDACTED]
<input type="radio"/>	[REDACTED]	[REDACTED]
<input type="radio"/>	T...	[REDACTED]

Exit Back Next

5. klik next

Step 3: Confirm save paths for project and backup files.

Project file save path:

C:/Program Files/Cubicost/TBQ SC\projects Browse


Backup file save path:

C:\Users\Public\Documents\Cubicost\TBQ SC\Server\Serve Browse


You can modify in [Server Settings](#) for the server later.

Exit Back Next

6. klik tombol start

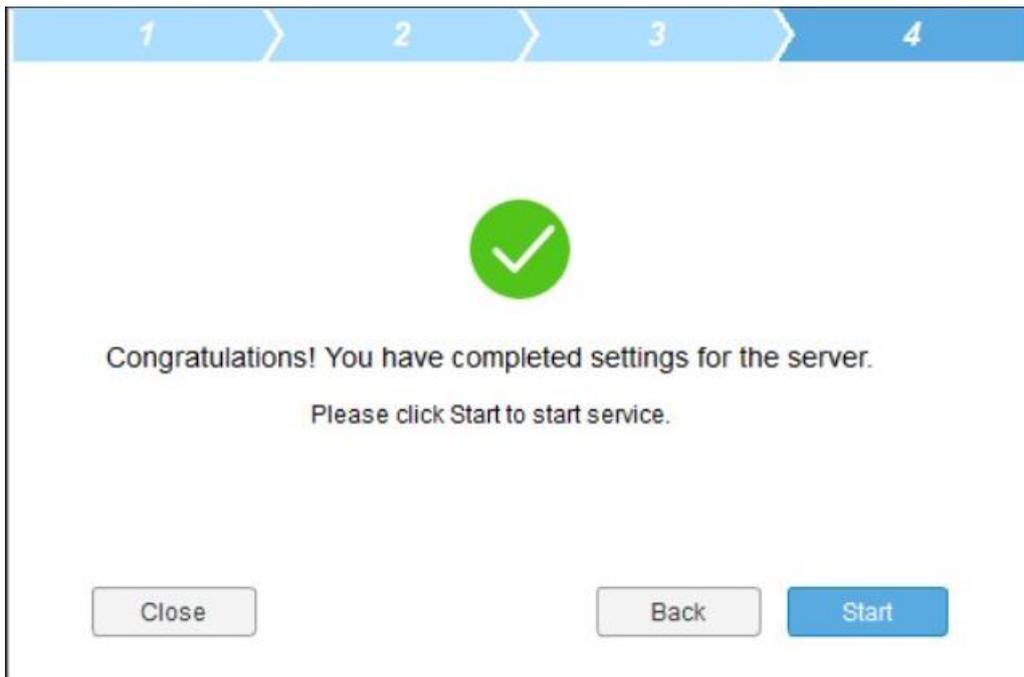


7. Klik tombol start pada tampilan aplikasi server, hingga muncul tulisan “service is running”

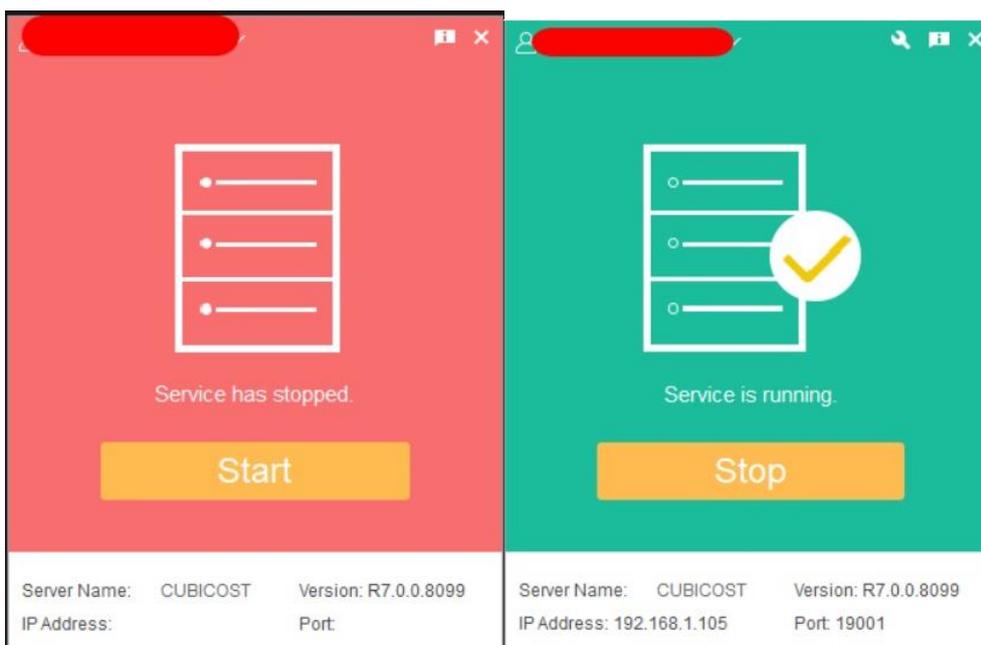

8. Terakhir, buka aplikasi TBQ

1. isi nama email dan password yang sudah di modifikasi
2. klik tanda kaca pembesar
3. Search server sehingga muncul nama laptop bapak dan ibu
4. Klik Ok dan Klik Login

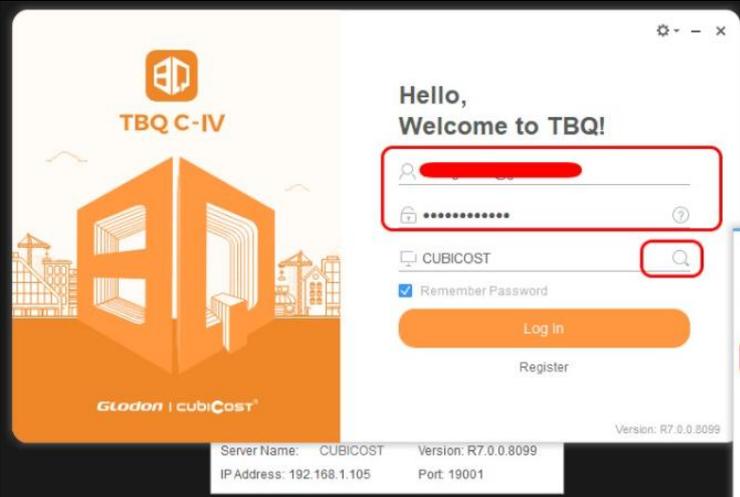


Logo: TBQ C-IV
GLodon | cubiCOST®

Version: R7.0.0.8099

Server Name: CUBICOST
IP Address: 192.168.1.105

Version: R7.0.0.8099
Port: 19001

Fields: Username, Password, CUBICOST (with search icon), Remember Password, Log In, Register

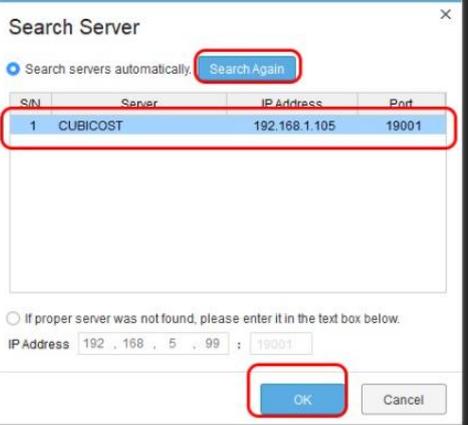

Search Server

Search servers automatically. Search Again

S/N	Server	IP Address	Port
1	CUBICOST	192.168.1.105	19001

If proper server was not found, please enter it in the text box below.

IP Address: 192 . 168 . 5 . 99 : 19001

Buttons: OK, Cancel