




Evertite Slimline™ Stitchery Frame Assembly instructions

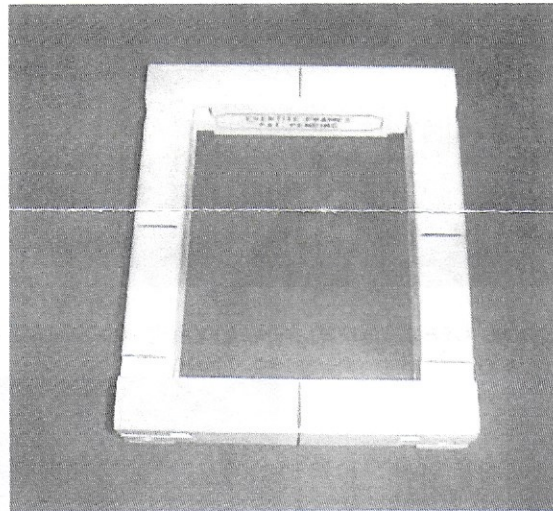

1. Be sure tensioning screws are retracted.


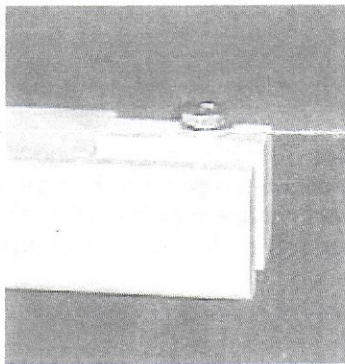


Like this

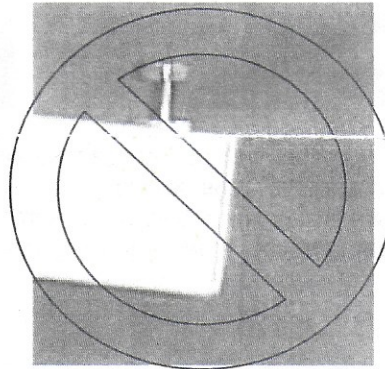


Not like this



2. Overlap bars at corner being sure that the tensioning screws are to the inside. Note that the logo is also to the inside and that logos on adjacent bars are inverted.

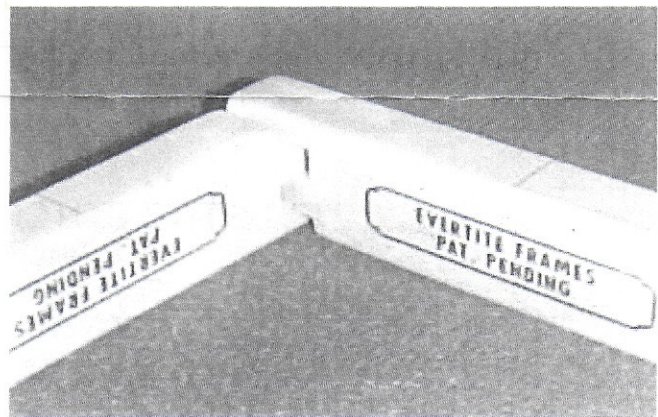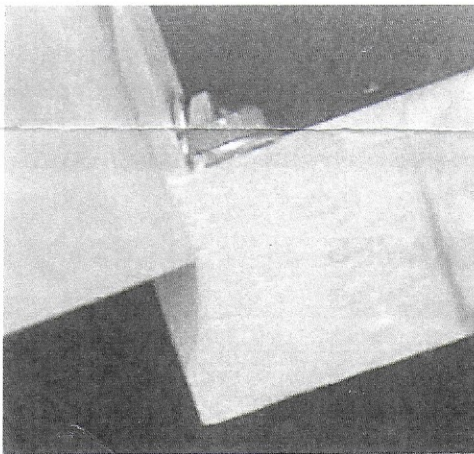



3. Slide corners together. Note the space between the faces of the adjacent bars.

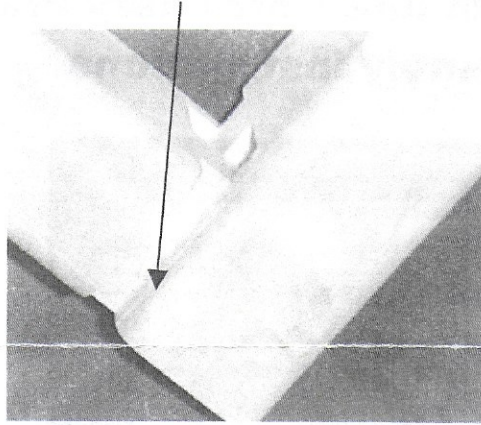

4. Attach canvas, leaving corner loose. Use centering marks to help locate canvas.

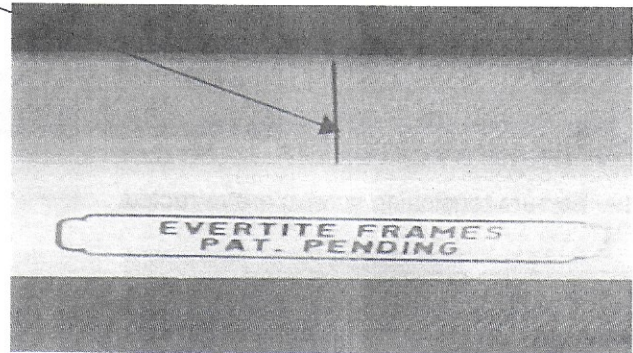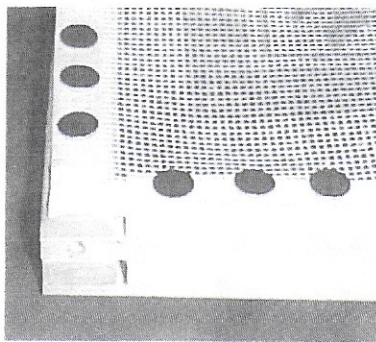

5. Using 3/32" hex key wrench tighten canvas to desired tension. Tension evenly around the project, we recommend no more than 5 turns per screw at any one time or your project will likely get out of square. Note that the screws turn easily, if they seem stiff be sure that they are not at the end of their travel. Continued efforts to turn screws after reaching the end of their travel will result in damage to the stretcher bars.

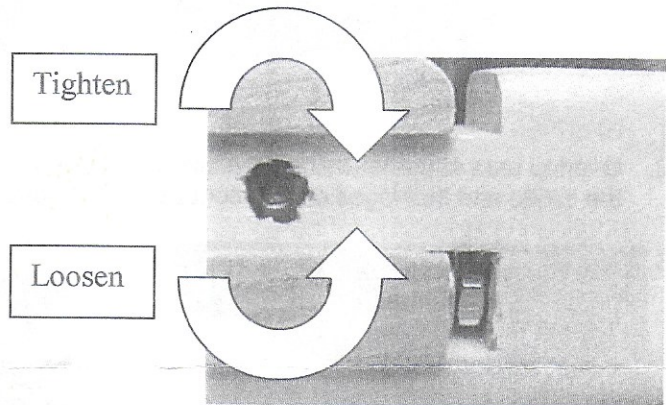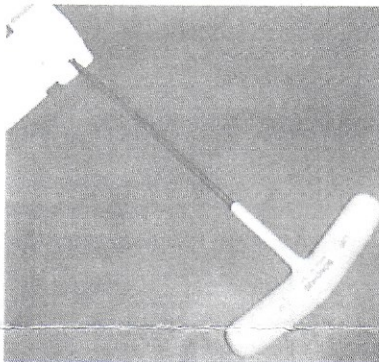

EVERTITE STITCHERY FRAMES

6325 Joseph St SE

Salem OR, 97301

503-585-5924

evertite@qwest.net

Protected by one or more of the following U.S. Patents: **6,604,306** & **6,757,997**. Other patents may be pending or applied for.